

The logo for 'nyne' is displayed in white lowercase letters on a black background. The background is a dark, trapezoidal shape that tapers to the right. The letters are stylized, with the 'y' having a long descender and the 'e' having a small registered trademark symbol (®) to its upper right.


nyne®

USER MANUAL

NHT5.1RGB

5.1 Channel Home Theatre System

SUBWOOFER REAR SIDE DESCRIPTION

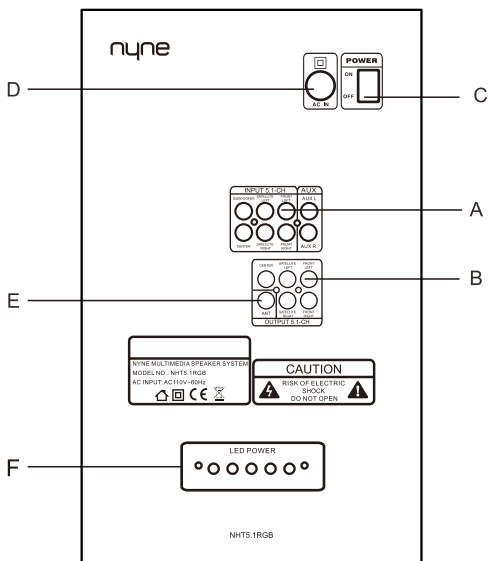

- A. STEREO INPUT
RCA Input Connectors
For Input From External Audio Source
- B. STEREO OUTPUT
RCA Connectors For The 5 speaker
And Subwoofer
- C. Power ON/OFF Switch
- D. POWER CABLE INPUT
AC110V~60Hz
- E. ANTENNA
- F. LED POWER

FEATURES

- 8" Active Subwoofer
- 1 Center Channel with dual 3" speakers
- 2 Full Range Front Channels with dual 3" speakers
- 2 Full Range Rear Channels with dual 3" speakers
- Multicolor Illumination:Subwoofer Tower and Speakers
- Top Quality MDF Cabinets with Plastic Front Panels
- LCD Digital Display
- 4 Band Equalizer

SPECIFICATIONS

Frequency response : 40Hz~20KHz

Impedance : Subwoofer 6 Ohm, Satellite 4 Ohm

S/N Ratio: ≥ 80 dB

Isolation sensitivity: ≥ 45 dB

Distortion: $\leq 0.3\%$ at 1W output @1KHz

Power: AC110V~60Hz

SAFETY PRECAUTION



WARNING:

To prevent fire or shock hazard, do not expose the unit to rain or moisture.

*Note: This product is for indoor use only.

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.



IMPORTANT SAFETY INSTRUCTIONS


- 1) Read these instructions before using the product.
- 2) Read all warnings carefully.
- 3) Follow all instructions carefully.
- 4) Do not use this apparatus near water.
- 5) Clean only with dry cloth.
- 6) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 7) Do not install the speaker system near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 8) Protect the power cord from being pinched, frayed, or cut.
- 9) Only use attachments/accessories specified by the manufacturer.
- 10) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the unit. When a cart is used, be cautious while moving the cart/unit combination to avoid injury from tip-over.
- 11) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 12) Refer all servicing to qualified service personnel. Servicing is required when the unit has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the unit, the unit has been exposed to rain or moisture, does not operate normally, or has been dropped.



PACKING LIST

- | | |
|---------------------|-------------|
| 1. Subwoofer | : 1 unit |
| 2. Speakers | : 5 units |
| 3. Mounting bracket | : 5 pieces |
| 4. Mounting Screw | : 10 pieces |
| 5. AAA battery | : 2 pieces |
| 6. User Manual | : 1 piece |
| 7. Remote Control | : 1 piece |
| 8. Antenna | : 1 piece |

SYSTEM CONNECTION DIAGRAM

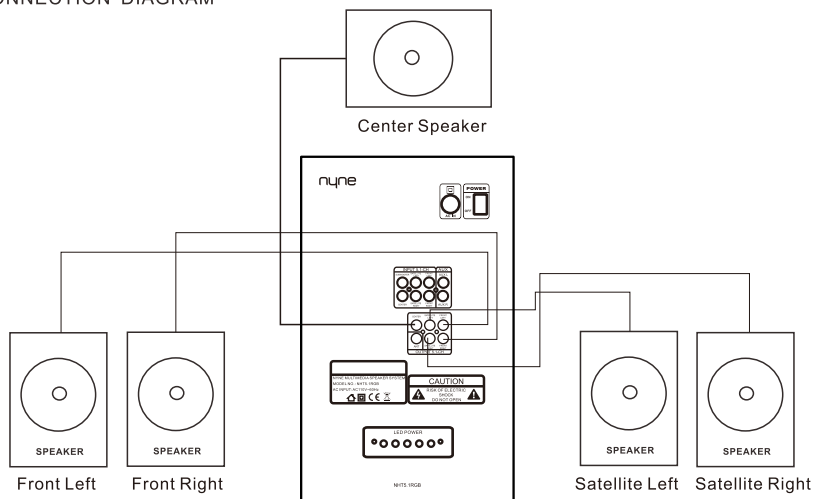

AC POWER

IMPORTANT NOTES



- Make sure the main power switch is in the "OFF" position before connecting the AC power cord to the power supply to avoid damage to the unit.
- A damaged power cord can easily cause an electric shock or fire hazard; Never use a power cord after it has been damaged.
- Never handle the power cord or operate the unit with wet hands

BATTERY INSTALLATION


- 1) Open the battery case.
- 2) Insert one battery without the polarity reversed.
- 3) Close the battery case.
- 4) Keep within 5 meter range, 30 degree angle while aiming at the unit.

Precautionary note:

Remove the battery when the unit is not being used for a long period of time.

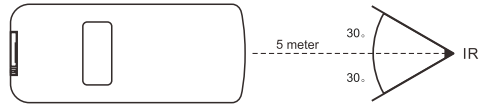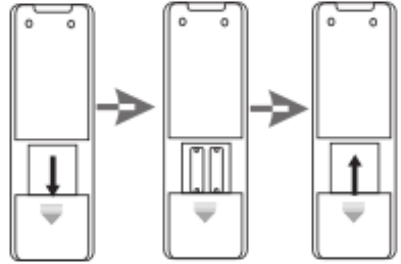

DESCRIPTION OF THE REMOTE CONTROL

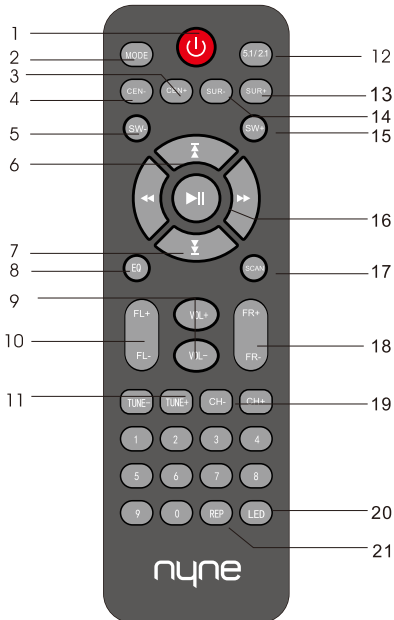

1. POWER: Switch on/off unit
2. MODE: Change play mode
3. CEN+: Central volume up
4. CEN-: Central volume down
5. SW-: Subwoofer volume down
6. PREV: Previous track
7. NEXT: Next track
8. EQ: Adjust sound effect (In Bluetooth mode only)
9. VOL+/VOL-: Main volume up/down
10. FL+/FL-: Front left volume up/down
11. TUNE+/TUNE-: Tune up/down
12. 5.1/2.1: Change 5.1/2.1 sound output
13. SUR+: Surround volume up
14. SUR-: Surround volume down
15. SW+: Subwoofer volume up
16. PLAY/PAUE: Play/pause
17. SCAN: Scan channels
18. FR+/FR-: Front right volume up/down
19. CH+/CH-: Channel up/down
20. LED: Select RGB light mode; Press and hold to turn on/off LED light
21. REP: Repeat



For any questions or repairs contact NYNE
customer service at: 805-751-4812

OR visit our tech support center on our website at:
nyne.com/support